

Shadowboard FotoScan




1) Place Lightbox



2) Place tools



3) Take foto

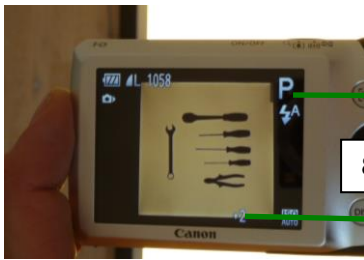

85-95 %



(A)



(B)

- vertical over LED panel
- distance as high as possible
- high items in centre
- 1 Foto from top view (A)
- 1 Foto isometric (B)


Right (4 corners visible)




False



Items should not be placed over panel frame (A)
Items should not cross each other (B)

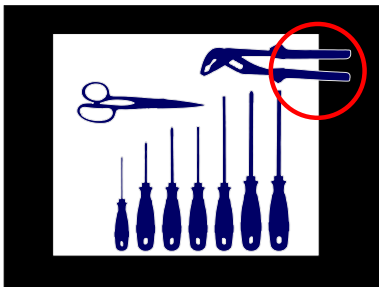

A X

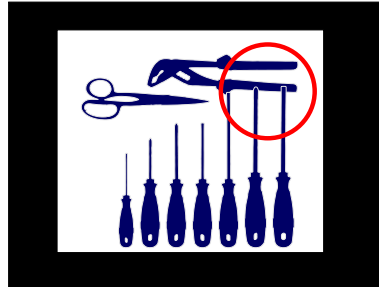

B X




Important informations for Shadowboard Foto Scan

1. Place Tool and Flightcase on the floor.
Minimum distance between camera and panel 1.5 m
All 4 corners of the panel must be visible on the camera screen.



2. Higher items should be recorded separately (Take single fotos). Place items in centre of panel.

3. Distance between tools approx. 2 cm

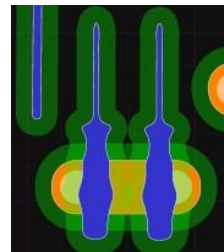

4. Distance to panel corner 2 cm.



5. Please send us a first test foto, we'll check this for you and get you a reply of the quality.
6. Please keep the LED panel clean (you can use standard glass cleaner for this).